

USER MANUAL


Model: RXS-01

Front End protection for your Radio

USER MANUAL

Specifications:

- Power: 12 VDC
- Fast switching time (not more than 5 ms)
- Isolated PTT output (to control the amplifier)

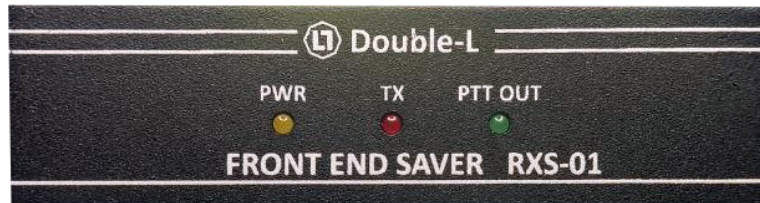




Front panel:

- LED PWR: power 12 VDC is On;
- LED TX: TX Mode - protection is active;
- LED PTT OUT: PTT OUT is active



Rear panel:

- PTT IN:
PTT input
- PTT OUT:
Isolated PTT output
- PWR +12V:
Power +12VDC 200mA connection
- RX IN:
Output to RX IN of the radio
- ANTENNA:
Receive Antenna Input

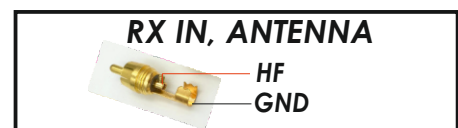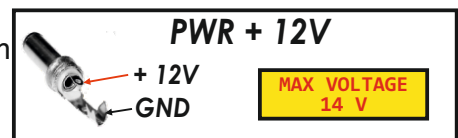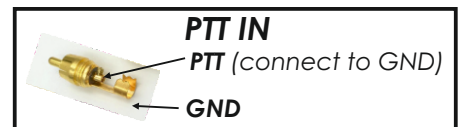

To be used ONLY with the radios which have separate RX antenna input